

In the following parts list, assemblies are printed in capital letters. Parts that are included with an assembly are listed and indented directly beneath it. When an assembly is ordered, the assembly and all parts indented beneath it are included in the shipment.

ITEM	DESCRIPTION	PART NO.	QTY
1	Knob, adjusting.....	4307-89	1
2	Screw	9PM5-12	4
3	Bonnet	74601-89	1
4	Adjusting screw	4330-50	1
5	T-HANDLE ASSEMBLY.....	74601-50	1
6	• T-handle, adjusting	1094-03	1
7	• Lock nut	1305-01	1
8	• Screw	9PM5-12	4
9	• Bonnet.....	(Not available - order item 5)	1
10	• Upper spring rest.....	5297-88	1
11	Spring, regulating (0,3 to 4 bar) (5 to 60 psig).....	4332-01	1
	(0,3 to 10 bar) 5 to 150 psig).....	4332-02	1
	(0,7 to 17 bar) (10 to 250 psig).....	4332-03	1
12	Diaphragm Relieving.....	4309-50	1
	Non-relieving.....	4309-51	1
13	Body (non replaceable part)		
14	Pipe plug R1/8	2338-99	2
	1/8 NPTF	2891-85	2
15	O-ring, ports.....	74248-11	2
16	Plug, bottom	4327-89	1
17	O-ring, bottom plug.....	2306-23	1
18	Spring, valve.....	5205-05	1
19	VALVE ASSEMBLY	4308-60	1
20	• O-ring.....	421-01	1

SERVICE KITS & ACCESSORIES

Service kit, relieving - Items 12, 15, 17, 18, 19, 20	4381-200
Service kit, non relieving - Items 12, 15, 17, 18, 19, 20	4381-201
Kit, pipe plug, 1/8 PTF - item 14 - contains two	3724-05
Kit, pipe plug, ISO R1/8 - item 14 - contains two	3723-06
Wall mounting bracket kit.....	43504-50
Panel mount nut.....	4348-89
Tamper resistant cover and seal wire (use only with knob adjustment)	4355-51

